

AMC 🖂 AMC Classic 🖂

AMC Dine In

#### **PURPOSE**

This document provides instructions for manually starting a Show Playlist (SPL) and how to bypass trailers to skip to the feature, especially when emergencies occur.

#### CONTENT

SONY PROJECTORS	1
DOREMI SERVER PROJECTORS	2
IMS2000/3000 PROJECTORS	2
GDC SERVER PROJECTORS	2
BARCO ICMP PROJECTORS	3
DOLBY CINEMA PROJECTORS	4

### **SONY PROJECTORS**

- 1. Log in to the Sony PJT at the projector.
  - Username: SHOWMGR
  - Password: 4151
- 2. Navigate to Menu > Shows > Automation.
  - a. **Click** the appropriate automation cue buttons for: Sound (Audio Digital), Masking (Flat or Scope) and the appropriate light level.



- 3. **Navigate** to Menu > Projector > Projection Control. Put the projector in the correct function. Confirm that the lamp is on and the dowser is open.
- 4. **Navigate** to Menu > Manage Shows.
  - a. **Select** the SPL to start.
  - b. Select Edit.
- 5. **Locate** the position in the playlist from which to start.

**Best Practice:** Start from one trailer before the feature) and record the time beside it. This will be your offset time.

- 6. Navigate to Menu > Show Listing.
- 7. **Select** the SPL title to start. When selected a "Play" icon will appear. **Press** Play.
- 8. **Navigate** to Menu > Now Showing. **Press** the "Pause" button. An "Offset" button will appear.
- 9. **Press** Offset. **Enter** the offset information recorded in step 5. **Press** Accept > Play.
- 10. **Confirm** that playback is on screen, in the correct format, audio is present, and lights are down. Manually **correct** any automation issues.

Theatre SOP Section Number: SS-3-45
Revised: 02/20/23 Page 1 of 4



AMC 🖂 AMC Classic 🖂

AMC Dine In

#### **DOREMI SERVER PROJECTORS**

- 1. Put the projector in the correct channel on the projector TPC.
- 2. **Confirm** that the lamp is on and the dowser is open.
- 3. **Confirm** the audio is set for feature sound on the soundrack.
- 4. **Confirm** the masking is in the correct format.
- 5. Navigate to the Playback tab on the Doremi.
- 6. Click on the Schedule button in the upper left corner. It should now say "Manual".
- 7. **Navigate** to the Editor tab on the Doremi. **Click** Open and **click** on the SPL to start and **select** Open again. The selected SPL will appear in the window on the right.
- 8. **Navigate** to the Playback tab. **Click** on the Schedule button in the upper left corner. It should now say "Manual".
- 9. Press Play and let the SPL load. Press Pause once the SPL is loaded and running.
- 10. **Use** the Advance button to advance to the next piece of content. **Advance** until there is a green circle next to the piece of content to start and **press** Play.
- 11. **Confirm** that playback is on screen, in the correct format, audio is present, and lights are down. Manually **correct** any automation issues.
- 12. **Place** the Doremi back into schedule mode after the show has started to reengage auto starts for the next scheduled showtime.

## IMS2000/3000 PROJECTORS

- 1. **Put** the projector in the correct channel on the Christie projector TPC/Keypad.
- 2. **Confirm** that the lamp is on and the dowser is open.
- 3. **Confirm** the audio is set for feature sound on the soundrack.
- 4. **Confirm** the masking is in the correct format.
- 5. Log into the IMS using the web browser using IMS IP address (ex: 10.xxx.xxx.140)
  - a. User: manager
  - b. Password: password
- 6. **Navigate** to the Editor tab on the IMS. **Click** Open and **click** on the SPL to start and **select** Open again. The selected SPL will appear in the window on the right.
- 7. Click on the Schedule button in the upper left corner. It should now say "Manual".
- 8. **Navigate** to the Playback tab. **Click** on the Schedule button in the upper left corner. It should now say "Manual."
- 9. Press 'Pause' and let the SPL load.
- 10. **Press** the 'Advance' button to advance to the next piece of content. **Advance** until there is a green circle next to the piece of content to start and **press** 'Play.'
- 11. **Confirm** that playback is on screen, in the correct format, audio is present, and lights are down. Manually **correct** any automation issues.
- 12. **Place** the IMS back into schedule mode after the show has started to reengage auto starts for the next scheduled showtime.

## **GDC SERVER PROJECTORS**

- 1. **Put** the projector in the correct channel on the TPC.
- 2. **Confirm** that the lamp is on and the dowser is open.
- 3. Confirm the audio is set for feature sound on the soundrack.

Theatre SOP Section Number: SS-3-45
Revised: 02/20/23 Page 2 of 4



AMC Dine In

AMC 🖂 AMC Classic 🖂

- 4. **Confirm** the masking is in the correct format.
- 5. Log into the GDC
  - a. **Password**: 123456
- 6. Navigate to the SPL Editor page by clicking the SPL Editor button on the playback page.



- 7. Click the drop down and select the desired SPL.
- 8. **Click** the "**Load Show To Play**" button in the bottom right corner.
- 9. Wait for the "Show is loaded ..." in the log display.
- 10. Click the play button, and then click the pause button right after.
- 11. **Click** the **skip button** to the beginning of the feature, usually noted as the largest green clip.
  - a. **Note:** If your preshow is integrated into the SPL, it will likely be faster to **skip BACKWARDS** than forward, as there will be less content to skip around.
- 12. Once you're at the desired start time, click play, and confirm both audio, and visual are good.

#### **BARCO ICMP PROJECTORS**

- 1. **Put** the projector in the correct channel on the TPC.
- 2. **Confirm** that the lamp (or laser) is on and the dowser is open.
- 3. **Confirm** the audio is set for feature sound on the soundrack.
- 4. **Confirm** the masking is in the correct format.
- 5. **Log** into the ICMP from either a computer, or by going to the projector.
  - a. User: show
  - b. Password: Show1234
- 6. Click the Player button.
- 7. Click the Scheduler button.
  - a. From the projector, you may need to click the scheduler button twice to go into manual mode.
- 8. **Click** the "**Open a show or clip**" button on the left bottom of the screen.
- 9. **Select** your desired SPL from the pop up menu, then press **Select**.
- 10. Click and hold, then drag the ball, located under the SPL, to the desired starting point.
  - a. Green indicates a feature
  - b. Pink indicates a trailer
  - c. Red indicates preshow
- 11. Click the play button, then confirm both audio and visual.

Theatre SOP Section Number: SS-3-45
Revised: 02/20/23 Page 3 of 4



AMC 🖂 AMC Classic 🖂

AMC Dine In

## **DOLBY CINEMA PROJECTORS**

- 1. **Put** the projector in the correct channel on the TPC.
- 2. **Confirm** that the laser is on and the dowser is open.
- 3. **Confirm** the audio is set for feature sound on the soundrack.
- 4. **Confirm** the masking is in the correct format.
- 5. Log into the Dolby Projector
  - a. User: Manager
  - b. Password: manager
- 6. **Click and hold** the load SPL indicator in the bottom right corner of the **Primary** projector till the circle has filled with a green color and a check mark.
- 7. **Select** your desired SPL from the pop up menu, then **click** load in the bottom right corner of the menu.
- 8. Wait for the SPL to load, this can take a few moments.
- 9. Click the arrow in the bottom middle of the screen to bring up the loaded SPL.
- 10. Scroll down from the right side of the screen until you locate the desired starting point.
- 11. **Click** the arrows on the left side of the screen, next to the time stamps, to jump to the desired starting point.
- 12. **Click and hold** the play button in the bottom left corner of the screen until it turns green with a check mark, then **confirm** audio and visual.

Theatre SOP Section Number: SS-3-45
Revised: 02/20/23 Page 4 of 4