

Powering on the Library Server

AMC \boxtimes

AMC Classic

AMC Dine In

PURPOSE

Follow the steps below to power on the Library Server. Please note these servers are powered by a UPS located in the same rack, usually at the bottom.

Dell NX3000 and NX3200 (older models)

1. These models have a separate, attached RAID for content (front shown below). Power this on **first**. It is either a Dell MD1000 or MD1200.



2. There are two power supplies located on the back of both models, each has a power button. Switch on both power switches.


MD1000



MD1200



- 3. Power on the NX3000 or NX3200.
 - a. Find the power button on the top left corner.
 - b. If a bezel is covering the front, insert a pen through it to reach the button.

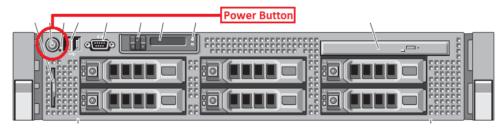

Dell R700xd Series (newer models including r720xd, r730xd and r740xd)



Theatre SOP Section Number: SS-4-50
Revised: 02/13/23 Page 1 of 1