



Sony R320 UPS Battery Replacement



AMC ☒ AMC Classic ☒ AMC Dine In ☒

PURPOSE

This document provides information and steps for replacing the UPS battery for Sony R320 projectors.

PROCEDURES

1. **Turn projector off**
 - a. On the touchscreen navigate to **Menu > Restart SMS > Shutdown**.
 - b. Click “Yes” on verification pop-up. The projector will take about five minutes to shut down.
2. **Flip off the main breaker and pedestal breakers** and locate the UPS in the pedestal after completing shut down.

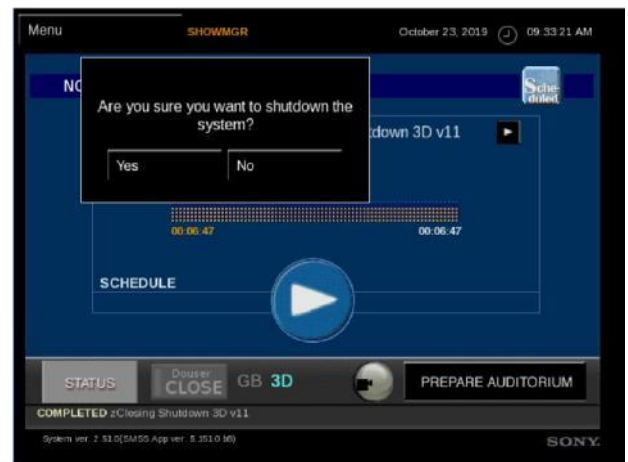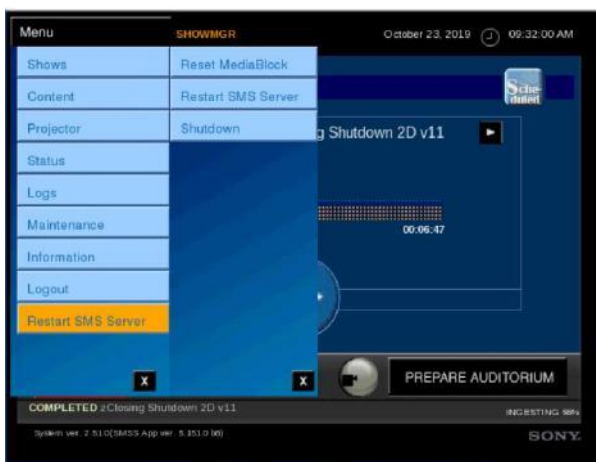





Sony R320 UPS Battery Replacement

AMC ☒ AMC Classic ☒ AMC Dine In ☒

3. **Remove** front cover of UPS, leaving ethernet cable attached.

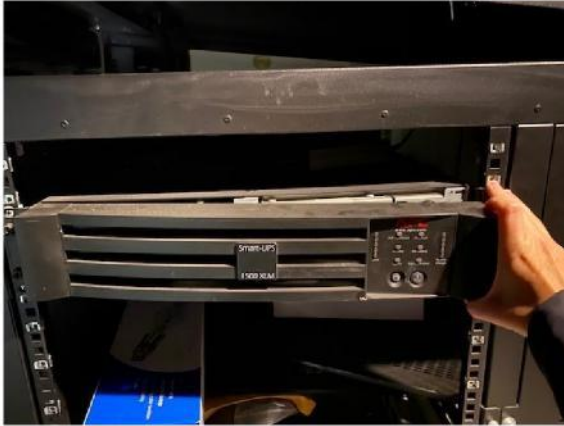

4. **Disconnect** blue connector and unscrew three screws. Lift slightly and remove UPS battery.

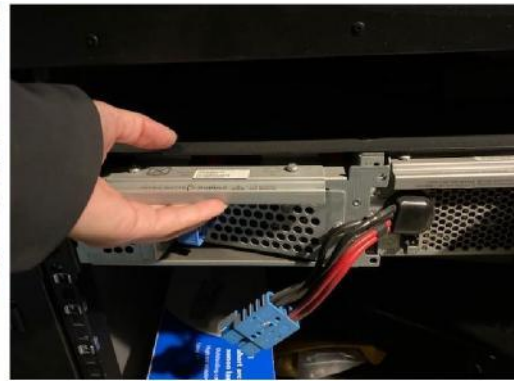

5. **Install** replacement UPS battery by repeating steps 3 and 4 in reverse order.
6. **Move** connections from power strip to UPS if UPS is bypassed,
7. **Flip** on the pedestal breakers then hold down the "Test" button to power on UPS.



8. **Flip** on the main breaker once the PJT loads to the login screen.
9. If projector shuts off after powering up completely, the battery may need to charge. Bypass the UPS once the machine is completely off and let the battery charge for 24 hours. Once it's fully charged there will be five Battery Charge LEDs lit.