



Replacing a Doremi Server Power Supply

AMC ☒

AMC Classic ☒

AMC Dine In ☒

PURPOSE

Follow the steps below to replace one of the power supplies for a Doremi server (which has two units). Symptoms of a failing power supply are a constant high-pitched beep and/or the power light is off.

NOTE

The Doremi server will run with one functional power supply and one inoperable. If both power supplies in a projector are inoperable, swap one of the inoperable ones with a functional one from another projector until a replacement arrives.

Do not remove or replace the power supply while a movie is running. Though uncommon, the Doremi may lose power or reboot causing a playback disruption.



PROCEDURES

1. **Unscrew** the bracket securing the power supplies on the back of the Doremi server (if applicable). The inoperable power supply will be the one with the LED not lit (in image # 1, both power supplies are operating properly).
2. **Unplug** the power supply that will be removed.
3. **Squeeze** the top spring-loaded clamp together with the handle and pull the power supply out
4. **Slide** the new power supply in until the spring-loaded clamp clicks back up.
5. **Plug in** the power cable.
6. **Replace** the bracket to re-secure the power supplies (if applicable).

